

		PC3 or INFO	PC3LE	
	Slider A	6	14	Knob 1
	Slider B	13	15	Knob 2
	Slider C	22	19	Knob 6
	Slider D	23	20	Knob 7
	Slider E	24	21	Knob 8
	Slider F	25	23	Knob 10
	Slider G	26	17	Knob 4
	Slider H	27	22	Knob 9
	Slider I	28	18	Knob 5
		14	16	Knob 3
		15	24	Knob 11
		16	25	Knob 12
		17	26	Knob 13
		18	27	Knob 14
		19	28	Knob 15
	Switch SW	29	80	Switch 1
		70	88	Switch 8
		71	87	Switch 7
		72	89	Switch 9
		73	86	Switch 6
		88	90	Switch 10
		92	81	Switch 2
		93	83	Switch 4
		94	85	Switch 5
		95	82	Switch 3